



---

English

---



# Rotary Lawnmower

## GRC450/GRC750

## User manual

### Congratulations!

On your purchase of your Black & Decker rotary lawnmower.

This user manual provides important operating and maintenance instructions for all of the cordless rotary mowers in the Black & Decker GRC450 and GRC750 ranges.

### Know your mower

 Read all of this manual carefully, observing all the recommended safety instructions before, during and after using your mower, and maintain your mower in good working order.

Familiarise yourself with the controls on your mower before attempting to operate it, but above all, be sure you know how to stop your mower in an emergency.

Retain this user manual and all other literature supplied with your mower for future reference.

### Safety instructions

#### Training

- Never allow children or persons who are unfamiliar with this type of mower to use it, nor anyone who has not read this user manual.



Do not allow children, animals or other persons near your mower when in use - always keep them at least 6m (20ft) away from the cutting area.

- Remember that the operator is responsible for accidents or hazards occurring to other people or their property.

#### Preparation

- To protect your feet, always wear stout shoes or boots - freshly cut grass is damp and slippery.
- Rubber or man-made footwear will enhance your safety.
- Do not operate your mower barefoot or in open sandals.



- Use protective equipment. Wear safety spectacles or goggles whilst operating your mower. Use ear protection if the sound level seems uncomfortable when using your mower.

- Use a face mask if dusty.
- Wear long trousers to protect your legs - any debris left on the lawn or cutting path may be picked up and ejected by the blades.
- Do not operate your mower in gaseous explosive atmospheres.
- Always be sure your mower is in a safe operating condition.
- Before using your mower, remove the safety key and visually check that the blade, blade nut and cutter assembly are not worn or damaged. Damaged blades and worn blade nuts must be replaced. Also check that the blade nut is securely fastened.
- Always check that your lawn or cutting path is clear of all sticks, stones, wire and other debris. Contact with such debris may be dangerous or may damage your mower and could be thrown by the blade.

#### Operation

- When tilting the handle downwards (or to the side) to start your mower, do not tilt it more than is absolutely necessary. Always ensure that both hands are in the operating position and feet are well away from the blades before returning your mower to the ground.



Your mower will continue to run for a short time after releasing the switch lever. Always allow your mower to stop on its own.

- Release the switch lever to turn your mower off and remove the safety key:
  - Whenever you leave your mower unattended.
  - Before checking, cleaning, adjusting or working on your mower.
  - Before clearing a blockage.
  - If your mower starts to vibrate abnormally (check immediately).
  - After striking a foreign object, inspect your mower for damage and make repairs as necessary.
- Avoid accidental starting. Ensure the switch is off then inserting the safety key.



## ENGLISH



- Never run your mower whilst lying on its side or attempt to stop the blade - always allow it to stop on its own.
- Do not put hands or feet near or under rotating parts.
- Keep clear of discharge openings at all times.
- Start your mower carefully according to the instructions and with your feet well away from the blade.
- Do not use your mower in the rain and do not allow it to get wet. Avoid using your mower in wet grass, if possible.
- Use your mower only in daylight or good artificial light.
- Do not pull your mower towards you or walk backwards when in operation.
- Do not cross gravel paths or roads whilst the blade is rotating.
- Always be sure of your footing, particularly on slopes.
- Always cut across the face of slopes, never up and down. Exercise extreme caution when changing direction on slopes.
- Do not cut excessively steep slopes and always wear non-slip footwear.
- Check the grassbox for wear or damage and replace if necessary.
- Walk, never run. Do not force your mower.
- Never pick up or carry your mower while the motor is running.
- Ensure the blade has stopped rotating and take extreme care before lifting your mower for and during transportation.
- Never operate your mower with defective guards or shields.
- When transporting your mower, always remove the safety key, adjust the cut height setting to a mid position and take extreme care when lifting.

### Maintenance and storage

- Store your mower in a dry place when not in use, remove the safety key and place out of the reach of children.
- Do not use solvents or cleaning fluids to clean your mower - use a blunt scraper to remove grass and dirt. Always remove the safety key before cleaning.
- Do not charge or store your mower outdoors.
- Do not operate your mower if any parts are defective; discard all defective parts and fit new parts before use.

- Replace worn or damaged parts for safety.
- Keep all nuts, bolts and screws tight to be sure your mower is in a safe working condition.
- Use only Black & Decker recommended replacement parts and accessories.

Black & Decker's policy is one of continuous improvement to our products and, as such, we reserve the right to change product specifications without prior notice.

### Features (Fig. A)

**A** Your purchase of the Black & Decker GRC450/GRC750 lawnmower gives you a product combining quality with modern design and the following features, to provide safe, efficient and easy mowing.

- Cordless - there is no need for extension cables while mowing.
- Gasless - there is no need for petrol and oil to buy, mix, store or transport.
- Clean - there are no emissions, the mower is environmentally friendly.
- Rechargeable battery - provides reliable power that will cut approx. 450m<sup>2</sup> (GRC450) or 750m<sup>2</sup> (GRC750).
- Easy to start - starts first time every time.
- Specially designed switch box and safety key (23) to prevent accidental starting of the mower.
- Ergonomically designed upswept handle for comfortable use and ease of pushing.
- A blade brake (autostop) for added safety - stops the blade from rotating within 3 seconds once the switchbox lever is released.
- Large handle wing nuts for easy assembly and storage.
- Three height of cut positions which provides the flexibility to deal with most grass conditions.
- The in line wheels allowing cutting right up to the edge of the lawn.
- Large capacity grassbox (30 litres) for longer cutting periods.
- Easy grassbox removal.



- Tough, durable plastic deck which will not rust and contributes to low noise and low vibration.
- Powerful and efficient permanent magnet motor which gives effective cutting and bagging in all reasonable conditions and a low noise level.
- The GRC450 will have a run time under average cutting conditions of approximately 450m<sup>2</sup>. The GRC750 will have a run time under average cutting conditions of approximately 750m<sup>2</sup>. This run time will vary upwards and downwards dependant upon grass conditions, cut height used and push speed.

### Unpacking and assembly

Your mower carton contains:

- The mower and handle assembly.
- One hardware bag containing:
  - Two safety keys (23).
  - Instruction literature.
  - Blade nut spanner (4).
- Charger (22).
- Battery strap (27).
- One grassbox assembly - see below for assembly instructions.

### Handle assembly (Fig. B)

Remove all the parts from the carton and familiarise yourself with the individual parts of your mower.

The main parts of your mower are your mower body (1) which comprises a motor cover (2), wheels (3) and grass flap (24).

The handle comprises the upper handle (5), cross bar (20), lower handle (6), switch box (7), switch lever (8), safety lock-off (9), cable clips (11) and wing nut and cup (12).

- B1**
- Assemble left lower leg (6L) and right lower leg (6R) onto cross member (20). Clip upper handle (5) over cross member ends, and fasten into place with nuts (12).

To assemble the lower handle (6) into the correct locations on your mower body (1), proceed as follows:

- B2**
- Insert the lower handles into the two holes in your mower body (1) and press down until secure. Secure in position using the screws supplied (13).

### Height of cut adjustment (Fig. C)



**Warning!** Remove safety key before making any adjustments and give the blade time to stop rotating; cutting blades are sharp.

Each of the two axle wheels has its own means of height adjustment which gives 3 cutting height positions.

**C**

- To select a height of cut, move the wheels (3) into the slot required using the spring system (16).
  - Fit the other three wheels in the same way.
- To ensure an even cut, please make sure that all four wheels are placed in the same position.

### Grassbox assembly (Fig. D)

Read the safety instructions at the beginning of this manual before using this accessory.

- The grassbox is a two piece (14 & 15) plastic construction which needs to be assembled before attaching it to your mower.

To assemble the grassbox, proceed as follows:

**D1**

- Align both parts together.

**D2**

- Clip in place.

**Fitting the grassbox to your mower:**

**D3**

- The spring loaded grass flap is lifted and the two arms on the front edge of the grassbox are located behind the two lugs rising up from the rear edge of the cutter deck (Fig. D3).
- The grass flap can now be released to lock the grassbox into position.

**Removing the grassbox from your mower:**

The full grassbox may be removed by raising the grassflap and then either lifting the grassbox up and then resting it on the lawn, while the grassflap is gently lowered, leaving both hands free to gently lift the full grassbox.

### Battery information

- The battery in your cordless lawnmower is a 12 volt or 24 volt sealed lead acid system. The battery employs an absorbed electrolyte and, can therefore, be stored in any position without fear of leakage.
- **The battery has been charged at the factory, however, it will be necessary to recharge the battery for a minimum of 8 hours to ensure full charge before initial use.**



## ENGLISH

- For optimal performance the battery should be recharged after each use.
- For winter storage ensure:
  - The mower is fully charged before storing.
  - The temperature of the storage location is below 25°C.
  - Storage duration is less than 6 months.
- Always store your mower in a dry and cool location.
- Keep the mower and battery away from water, heat sources (such as radiators, heaters, stoves etc.), flames or chemicals.

### Charging instructions (Fig. E)



- Always charge your mower indoors in a well ventilated area, where it is dry and protected from the weather.
- Charge mower in a location where the temperature is more than 5°C (41 F) and below 40°C (104°F).



**Warning!** Do not attempt to charge non-rechargeable batteries.

#### To charge

- The battery on your mower can be charged on the mower or can be removed and charged away from the mower if a mains socket is not at hand.

#### To charge the battery ON the mower

- Remove the safety key (23) and store in a safe place away from children.
- Open the battery cover (2) by pressing in the button at the front of the cover and hinge upwards.
- Disconnect the battery lead (red and black) by pulling it from the connector.
- The red and black socket of the charger is then connected to the red and black socket of the battery.

**Note:** The charger socket will fit one way only.

- Connect the charger to the mains socket and switch on.
- The indicator on the charger will turn on. This indicates that the battery is being charged.
- The normal charge time is **24 to 30 hours**.
- With the 12 volt, GRC450 mower, the red indicator light will go out, to show a fully charged condition. A green light will now turn on to indicate a 'maintenance' charge mode.
- With the 24 volt, GRC750 mower, the charging indicator will stay on as long as

the mower is connected to a mains supply, and after the battery has charged, continue in the 'maintenance' charge mode.

- It is safe to leave your battery on charge until ready to use.
- Disconnect the charger from the battery and connect the battery to the socket on the mower.
- Your mower is now ready for use.

#### To charge the battery OFF the mower

- Remove the safety key and open battery cover as described above and disconnect the battery.
- Lift out battery out of the mower using the carry handle.
- Charge as described above.
- After charging, replace in mower and connect to the mower socket.

### Important!

#### Recharge mower to a full charge immediately after use.

In order to get maximum performance from your mower with maximum battery life, it is important that you recharge the battery immediately after each use. Battery failure will occur if the mower is stored without having a full charge.

#### Recharge mower to a full charge for winter storage.

When preparing your mower for winter storage, it is important that it is recharged. Battery failure will occur if the mower is stored without having a full charge.

### Battery disposal

When the mower's battery requires replacing discharge the energy from the battery by running the mower until the motor stops. Remove the battery from the mower .



**Warning:** The battery may still have some residual charge even after the motor stops. It is therefore necessary to protect against accidental short circuit of the battery terminals with uninsulated tools or materials of a conductive nature, such as, but not limited to steel wool or aluminium foil.

Batteries must be disposed of in a responsible manner.



This symbol indicates the lead acid battery contained within this unit must be disposed of properly and not discarded in everyday household waste which may be disposed of in an incinerator or landfill site.



Lead acid batteries can be harmful to the environment and can explode when exposed to fire. **Do not incinerate.**

The battery should be taken to a Black & Decker authorised service agent, your local dealer or your local recycling station. If necessary, contact your local authority for disposal information.

If the cutting performance begins to deteriorate, please refer to the "Fault finding" guide.



**Warning!** Do not cross battery leads when installing a new battery as this will cause the blade to run in reverse until battery is discharged. When you attempt to recharge the battery, the charger circuit will be destroyed as soon as you connect the charger plug.

## How to use your mower (Fig. F & G)



**Observe all of the relevant warnings when using your mower.**

**Warning!** Never attempt to operate your machine with one hand. You must guide your machine with both hands.

### Safety key

F

- In order to prevent accidental start-up or unauthorised use of your cordless mower, a removable safety key has been incorporated into the design of your mower. The mower will be completely disabled when this safety key has been removed from the mower.



**Warning!** Always remove the safety key from mower when leaving it unattended, even for a short period of time.

- Your safety key will be found in the parts pack (plus one spare).

### Starting

- Lift the fuse cover (21).
- Insert the safety key (23) into position and push fully home.
- Close the fuse cover (21).
- Tilt the handle downwards to slightly raise the front of the mower to reduce the risk of lawn damage whilst starting.

G

- Your mower is equipped with a special on/off switch lever. To operate your mower, press the button on the switch box then pull the lever towards you. Hold in this position to keep the mower running.

- To turn the mower off, just release the lever. The spring-loaded "snap-action" lever will relocate itself back into its original position inside the switch housing.

When you have finished using your machine we recommend that you clean all debris from it before putting it away. It is important to remove the safety key before cleaning. Please refer to the "Care and maintenance" section.

**Note:** To obtain the best results cut your lawn or grassed area regularly and do not cut when the grass is wet.

If, when grasscutting, loose grass is seen to be scattered from beneath the mower, the grass-bag is probably full and should be emptied.

## Blade maintenance

The steel blade is designed to give a fine finish in long or tough grass. The blade will continue to cut even when it has become blunt or burred. There is no need for it to be razor sharp.

If, however, because of damage or wear the cutting performance deteriorates, then your mower may require a new blade, or at least the existing blade to be sharpened.

We recommend that the steel blade is sharpened or a new blade fitted at the beginning of each season.

Replacement blades are available from Black & Decker service agents.



**Warning!** When fitting a new blade use only the Black & Decker replacement part specified for your mower - do not attempt to fit any other blade.

## Fitting a new blade (Fig. H)



**Observe all the relevant warnings before changing the blade.**

**Warning!** Remove safety key before changing the blade.

H1

- Turn your machine over on its side so that the underside of the cutter deck is exposed.
- Wear gloves to protect hands.
- Using a cloth placed over the blade or heavy duty gloves to protect your hands, grip the blade and, using the spanner provided, loosen and remove the nut from the motor spindle. Turn the nut in an anti-clockwise direction to loosen it.

H2

- Remove nut (18), square washer (17), clutch plate (16) and blade.



## ENGLISH

- To replace blade ensure the cutting edges of the blade are closest to the ground and place blade onto the combined mount.
- H3**
- Place the clutch plate over the shoulder of the combined mount protruding through the blade. Ensure to align the inside edges with the outside edges of the blade.
- H4**
- Place the square steel blade spacer on the motor shaft aligning the inside flats with the shaft and engaging the outside edges with the plastic clutch plate. Engage nut on shaft and turn it clockwise to tighten.
  - Ensure that removed parts are replaced correctly before use, incorrect assembly may result in damage to your mower and reduced cutting performance.

**Note:** This unit is fitted with a clutch plate (16), between the blade nut and the blade, which must be assembled correctly at all times. Damaged blade assembly parts must be replaced before use.

### Care and maintenance

The advice given in this section covers the general care and maintenance of the main body of your mower. Advice relating to the blades is given in "Maintenance of blades". Advice relating to the maintenance and storage of the battery is given in "Battery information".

- Always keep your mower clean and free from grass cuttings, especially the underside of the cutter deck and the air vents.
- At the end of each cutting session we recommend that the build up of grass on the underside of the cutter cover is removed using a blunt scraper. The spanner included with this mower may also be used for this purpose.
- Clean all plastic components with a damp cloth.

**Caution:** Do not use solvents or cleaning fluids as these may damage the plastic components of your mower.

### Overload protection (Fig. J)

- Your machine is fitted with overload protection. If you work too quickly in long grass, or in heavy conditions, you may overload the motor. If this occurs, the safety key fuse will blow, causing the machine to stop.
- This is not a fault of the machine but a safety device to protect your machine.

- J**
- When this occurs, remove the safety key and inspect the fuse link. If link is broken, the fuse has blown and needs to be replaced with a new key. One of which is supplied as a spare in your parts pack. Alternatively, you can purchase a new key from any Black & Decker service agent.

To obtain the best results:

- Cut the grass regularly.
- Do not cut wet grass.
- When the grass is longer than 10cm (4 inches), it is advisable to go over the lawn on a high cut setting and then finish using a lower setting.

### Fault finding

If your mower does not operate correctly, use the table below to locate the problem.

Problem	Solution
Mower does not run when switch lever is activated	(a) Check to make sure the safety key has been inserted correctly. (b) Remove the safety key, turn your mower over and check that the blade is free to turn. (c) Has battery been fully charged? Recharge the battery.
Mower stops when mowing	(a) Remove safety key. Turn your mower over and check that blade is free to turn. (b) Raise cutting height of wheels and start mower. (c) Has battery been fully charged. Recharge the battery. (d) Inspect the safety key fuse link. If broken, the safety key fuse has blown and requires replacement.
Mower runs but cutting performance is unsatisfactory	(a) Has battery been fully charged? Recharge the battery. (b) Battery may need replacing. Refer to 'Battery disposal' section.
Mower is too hard to push	(a) Raise cutting height to reduce drag on grass. Check each wheel for ease of rotation.
Mower is abnormally noisy and vibrates	(a) Remove safety key. Turn unit on its side and check blade for damage. If damaged, replace with Black & Decker replacement blade. (b) If there is no visible damage to the blade or underside of the mower return to your local service agent.

7



## ENGLISH



**Warning!** Always remove safety key before carrying out any inspection.

### Unwanted products and the environment



Should you find one day that your mower needs replacement, or is of no further use to you, think of the protection of the environment. Black & Decker service agents will accept your old mower and will dispose of it in an environmentally safe way.

### Black & Decker lawn and garden guarantee

**This guarantee provides 36 months parts cover and 12 months labour (UK), 24 months parts cover and labour (Australia and New Zealand).** In all cases proof of purchase will be required.

If your Black & Decker mower becomes defective, within the guarantee period, due to faulty materials and workmanship, we guarantee to either replace all defective parts, or at our discretion, replace your mower free of charge, provided that:

- Your mower is returned to one of our authorised repair agents with evidence of purchase.
- Your mower has been used within the parameters of its consumer classification.
- Your mower has not been used for hire purposes.
- Repairs have not been attempted by anyone other than our authorised repair agents.
- The failure represents normal wear and tear.

This guarantee is offered as an extra benefit and is additional to your statutory rights.

### Our guarantee policy

Failures due to the following are not covered:

- Replacing worn or damaged blades, nylon line and chains, or cables damaged during storage or use. These are regarded as replacement items which wear during normal usage.
- Failures as a result of sudden impact or obvious abuse.
- Failures due to usage not in accordance with instructions and recommendations contained in this manual.

The use of other than genuine Black & Decker accessories and parts may damage or reduce the

performance of your Black & Decker mower and may render the guarantee void.

### After sales service for your Black & Decker product (UK, Australia and New Zealand only)

Black & Decker offers a nationwide network of authorised service agents. The use of other than genuine Black & Decker accessories and parts may damage or reduce the performance of your Black & Decker product and may also endanger the user. The terms and conditions of the warranty may also be effected.

### Our after sales service policy (UK, Australia and New Zealand only)

It is our aim that all Black & Decker customers should be totally satisfied with their Black & Decker product and after sales service, but if help or advice is needed please contact your local Black & Decker authorised repair agent who will be happy to help.

Full details of our after sales service and a list of these agents can be found on the Internet at [www.2helpU.com](http://www.2helpU.com). Alternatively, call our Service and Information Centre whose number you will find towards the back of this manual.

### Other Black & Decker products (UK only)

Black & Decker has a full range of outdoor power tools that make life easy in the garden. If you would like further information on other products, please contact the Black & Decker Service Information Centre at the address towards the back of this manual, or contact your Black & Decker stockist.

**Lawnmowers, String trimmers, Chainsaws, Lawnrakers, Compost shredders, Leafbusters, Blade trimmers, Cordless brooms, Cordless trimsaws, Cordless shrubbers, Cordless shears, Hedgetrimmers**

#### EC Declaration of Conformity

We declare that units:

**GRC450, GRC750**

conform to 98/37/EC, 89/336/EEC, 73/23/EEC, EN55104, EN60335, EN55014

A weighted sound pressure @ 4m 80dB (A)

A weighted sound power 91dB (A)

Hand/arm weighted vibration <2.5m/s<sup>2</sup>

Brian Cooke

Director of Engineering

Spennymoor, County Durham DL16 6JG, United Kingdom



SERVICE SHEET  
to insert (get from  
Chris Weaver)





---

<b>Australia</b>	DeWalt Industrial Power Tool Company (Distributors of Black & Decker products) 7 Clarice Road, Box Hill, Victoria 3128	Tel: 03 9895 9200 Fax: 03 9899 7465
<b>New Zealand</b>	Black & Decker 483 Great South Road Penrose, Auckland	Tel: 09 579 7600 Fax: 09 579 8200
<b>South Africa</b>	Black & Decker South Africa (Pty) Ltd Suite no 107, PostNet X65 Halfway House 1685	Tel: 011 314 4431 Fax: 011 314 4435
<b>United Kingdom</b>	Black & Decker 210 Bath Road, Slough Berkshire SL1 3YD	Tel: 01753 574277 Tlx: 848317 BAND MH Fax: 01753 551155

---





# BLACK & DECKER® GUARANTEE CARD

## AUSTRALIA/NEW ZEALAND 2 YEAR REPAIR GUARANTEE

Black & Decker welcomes you as a purchaser of this product from our range of Home Workshop and Garden Tools and Accessories. All our products are engineered and manufactured to ensure the highest standards of reliability and performance during use, and are supported in After Sales Service by a wide network of Black & Decker Authorised Service Centres.

### BLACK & DECKER SUPPLEMENTARY GUARANTEE

Subject to the conditions stated below, Black & Decker guarantees that it will correct by repair or parts replacement, without charge, any defect in the product which this Guarantee Card accompanies ("Product") arising from faulty workmanship or materials where such defect arises within two years from the date of purchase of the product. A product subject to claim under this guarantee should be returned as a complete unit to the most convenient Black & Decker Authorised Service Centre or Agent.

### CONDITIONS

The Black & Decker Supplementary Guarantee does not apply in the following cases:

- where the product has been used for trade or industrial purposes;
- where any defect or failure is attributed to accident, misuse, abuse, negligence or non-observance of local regulations on the part of the owner or user; or
- where the product has been serviced by a person not authorised by Black & Decker to do so, or with non-approved parts; or
- to loose accessories.

In order to enforce the Black & Decker Supplementary Guarantee, proof of purchase is required (Guarantee Card and or store receipt). The period of the Black & Decker Supplementary Guarantee begins

from the original date of purchase notwithstanding any subsequent repair or parts replacement. No Guarantees other than contained in this document, whether written or verbal, are authorised to be made on behalf of Black & Decker. All other conditions and guarantees whether expressed or implied by law, are, to the extent permitted by law, hereby excluded. **The Black & Decker Supplementary Guarantee does not apply outside Australia and New Zealand.**

### PURCHASERS' STATUTORY RIGHTS

The Black & Decker Supplementary Guarantee set out above does not exclude any conditions or guarantees that may be mandatorily implied by law, and your attention is drawn to the provisions of the Consumer Guarantee Act 1993 (New Zealand only), Trade Practices Act 1974 and State legislation (Australia only), which confers rights upon consumers. The Black & Decker Supplementary Guarantee is in addition to any rights conferred on a consumer under the Act, where applicable, and any other rights provided under applicable legislation.

### WARRANTY REGISTRATION

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_

PHONE: \_\_\_\_\_ POST CODE: \_\_\_\_\_

Catalogue number: \_\_\_\_\_ Description: \_\_\_\_\_

Date of purchase: \_\_\_\_\_ Retailer's name: \_\_\_\_\_



**RETAIN THIS CARD**





# AUSTRALIA/NEW ZEALAND Part No: 763838



**DO NOT MAIL THIS CARD TO BLACK & DECKER. RETAIN THIS CARD IN CASE OF A CLAIM.**

### UPON PURCHASE

Fill in the Warranty Registration Section of the card and attach your purchase receipt to the top corner of the card. Retain in case of claims in the future.

### MAKING A CLAIM

Take your defective product together with the Warranty Registration Card and purchase receipt to your local Service Centre. You can either do this in person or send freight prepaid. If mailing or shipping your appliance, ensure to remove any liquids from the product (if applicable) and pack it carefully in a sturdy carton with enough packing material to prevent damage. Include a note describing the problem to the Service Centre and be sure to give your telephone number and return address.

### AUSTRALIA

DeWalt Power Tool Company  
(Distributors of Black & Decker products)  
7 Clarence Road, Box Hill  
Victoria, 3128

### For Service

See "Electric Tools-Retail and/or Repairs" section of Yellow Pages for Service & Sales, otherwise Head Office (03) 9213 8200



### NEW ZEALAND

Black & Decker (New Zealand) Limited  
Consumer Home Workshop & Garden Tools  
Product Service Division,  
PO Box 12-135  
Penrose, Auckland

### For your local Authorised Service Centre

Please contact your retailer or Black & Decker (NZ) Limited  
483 Great South Road  
Penrose, Auckland  
Ph: (09) 579 7600  
Fax: (09) 525 1975

ATTACH RECEIPT HERE

6/99.2

Date of your purchase:

Address of the dealer where your lawnmower was purchased:

	Yes	No
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Was your lawnmower a gift? \_\_\_\_\_

Was your lawnmower your first purchase? \_\_\_\_\_

Was your lawnmower bought as a replacement? \_\_\_\_\_

What was the price of your lawnmower? \_\_\_\_\_

Address of the dealer where your lawnmower was purchased:

\_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Name: \_\_\_\_\_

House number or name and street: \_\_\_\_\_

Town: \_\_\_\_\_

County or state: \_\_\_\_\_

Postcode: \_\_\_\_\_

Country: \_\_\_\_\_

Product catalogue number: GRC \_\_\_\_ / \_\_\_\_

**Data protection act:** Tick this box if you prefer **not** to receive information from Black & Decker or other companies.





## **GUARANTEE CARD - UK, IRELAND & SOUTH AFRICA**

**South Africa:** Black & Decker South Africa (Pty) Ltd, Suite no 107, PostNet X65, Halfway House 1685

**United Kingdom & Ireland:** PO Box 821, Slough, Berkshire, SL1 3AR




Please complete this section immediately after the purchase of your lawnmower  
and post it to the Black & Decker address in your country (above).





 **BLACK &  
DECKER**®

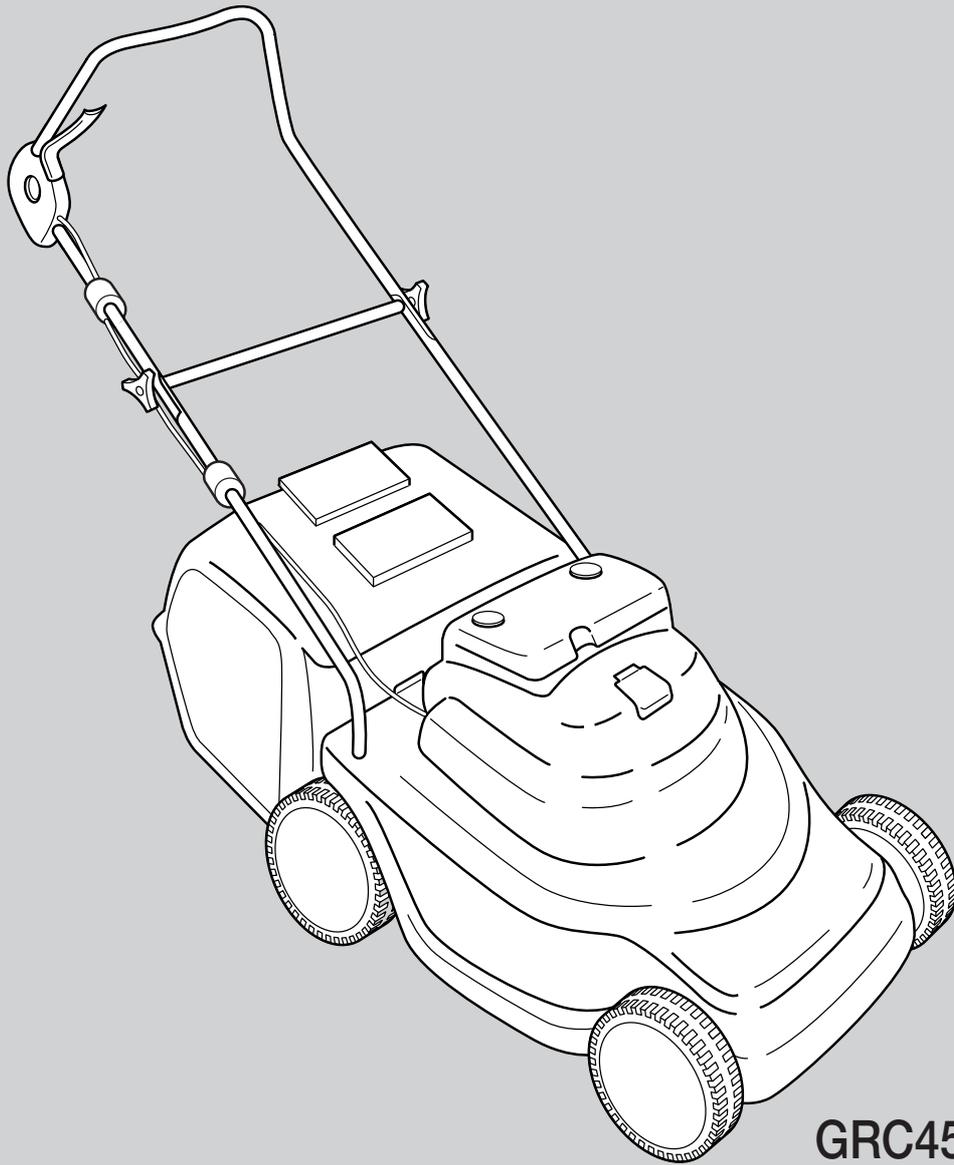

**GRC450  
GRC750**



